


Ford 6 Position Chip Installation Instructions

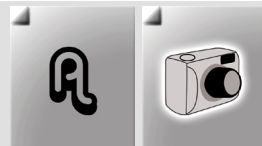


* Many times the catch code of the truck which is needed to program the chip can be found on the driver side door sticker (negating the need to remove the computer prior to installation when ordering a chip)




1. Remove the plastic cover next to the parking brake pedal so that the computer can be accessed. The truck may have one or two plastic covers that may have to be removed before the computer can be accessed.



2. On the driver-side of the firewall in the engine compartment locate the plastic cover and wiring harness that covers the computer and disconnect it. There will be one bolt that holds the computer in place.

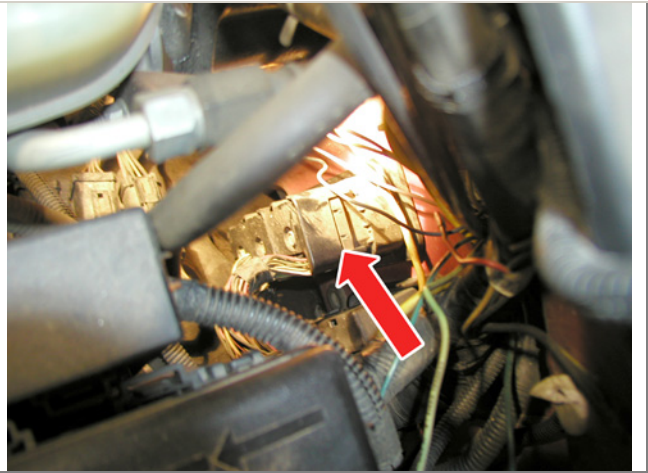

3. Once the cover is disconnected from the engine side of the computer the module can be uninstalled by pulling the computer towards you from inside the cab. Once the computer is removed the terminal where the chip installs will need to be cleaned (*thoroughly*) to remove the wax covering. The wax covering on the terminals must be fully removed for the chip to function. (*Shown in vehicle for demonstration only – remove before cleaning terminal*)

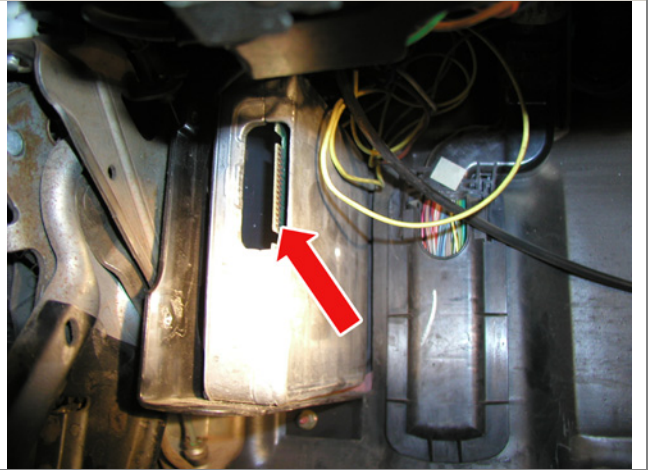

* After the computer is removed you will be able to locate the catch code, which is needed to program the chip when ordering.



4. Determine a suitable mounting location on the dash or otherwise for the 6 position dial (which is used to select the desired power level), and install the dial.

5. Feed the cable from dial on the dash to the plug-in terminal on the chip to plug in the cable.

6. Install the chip onto the terminal connections on the computer and re-install the computer.

7. Replace the plastic cover(s) over the computer.	
--	--

Thank you for choosing ATS Diesel Performance!